
 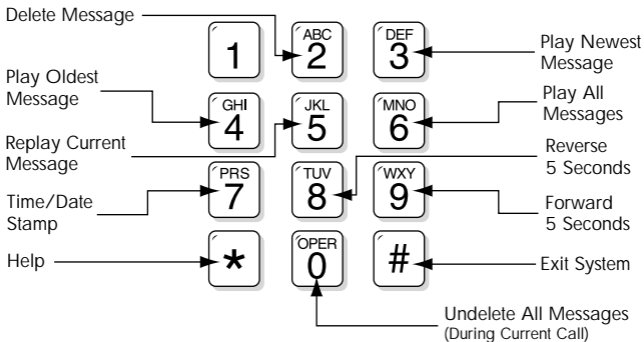


VOICE MESSAGING USER'S GUIDE



HOW TO USE VOICE MESSAGING

1. Call your PAGER number

2. When you hear your greeting, IMMEDIATELY press OPER

3. Enter your access code

FOR MAIN MENU FUNCTIONS, REFER TO THE REVERSE SIDE

GENERAL FUNCTION COMMANDS

- ▶ Return to main menu
- ▶ For help

TO CHANGE ACCESS CODE

- ▶ + New code (4 to 8 digits) +
- ▶ To hear new code

TO CHANGE CUSTOM GREETING

- ▶ Begin recording
- ▶ End recording
- ▶ Playback greeting

TO SELECT NUMERIC RETRIEVAL MENU

- ▶ To delete message
- ▶ Play newest message
- ▶ Play oldest message
- ▶ Replay current message
- ▶ Play all messages
- ▶ Time & date stamp

TO SELECT MESSAGE FORWARDING MENU

- ▶ Restore original message
- ▶ Play message
- ▶ Forward message
- ▶ Prepend message
- ▶ Record new message
- ▶ Append message

NATIONAL CUSTOMER SERVICE CENTER

800-333-4722



Metrocall[®]
wireless