




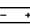 






Pager Controls and Indicators


Icons:

- | | | | |
|---|-------------------|---|-----------------------|
|  | Alarm is set |  | Message continues |
|  | Vibrate mode |  | Out-Of-Range |
|  | Musical alert |  | Battery Low |
|  | New message |  | Phone Book |
|  | Message is locked |  | Auto On/Off is active |

Function - Press to move between features and change values.

Select/Backlight - Press to select features and turn backlight on or off.

 Read/Escape - Press to read messages or return to the Status screen.

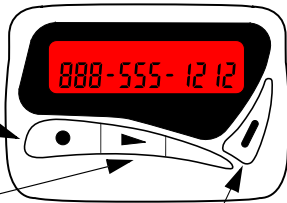


- **Function:** Press to move between features and change values.
- ▶ **Select/Backlight:** Press to select features and turn on/off the backlight.
- **Read/Escape:** Press to read messages or return to the Status screen.

Contents

Introduction	1	Phone Book	10
Pager Controls and Indicators	1	Adding Phone Numbers	10
Getting Started	3	Modifying Phone Numbers	11
Battery Information.....	3	Browsing Your Phone Book Entries	11
Installing/Replacing the Battery	3	Searching Your Phone Book Entries...	12
Turning Your Pager On.....	4	QuickWords	12
Turning Your Pager Off.....	4	Setting the Auto On/Off Times	13
Turning on the Backlight.	4	Setting the Countdown Timer	13
Pager Tips.....	4		
Personalizing Your Bravo 500 Pager.....	5		
Time and Date	5		
Setting the Time.....	5		
Setting the Date	6		
Setting the Alarm	6		
Displaying Date or Day of the Week	7		
Setting the Message Alert	7		
Setting the Reminder Alert	7		
Messages	8		
Reading Messages	8		
Locking/Unlocking Messages	8		
Storing Individual Messages	9		
Deleting Messages	9		

 
Getting Started

Battery Information

Your pager uses one AAA-size alkaline battery (do not use carbon zinc batteries). If  is displayed, the battery is low. Replace the battery.

Installing/Replacing the Battery

Note: You only have two minutes to replace the old battery with the new battery. Otherwise, you may lose all saved settings and pages.

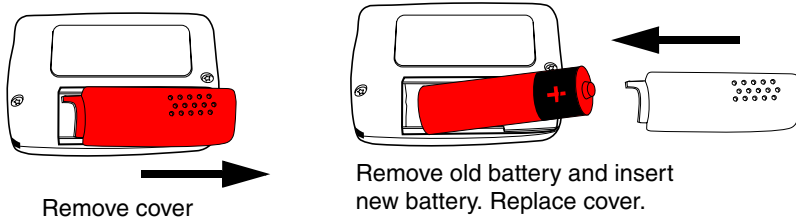

Caution! You must match the (+) and (-) polarity markings. If you insert the battery backwards, your pager settings (time, date, etc.) will be erased.



Getting Started


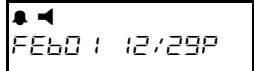 
3



Getting Started

4

Turning Your Pager On

Press	To Display	Description
	Status Screen 	The Status screen displays the date and time and other status indicators.


Turning Your Pager Off

Press	To Display	Then Press
	PAGER OFF	

Turning on the Backlight.

Press	To Display	Then Press
 and hold	Backlight	Automatically turns off.

Pager Tips

1. After 8 seconds of inactivity, the pager returns to the Status screen without saving the changes.
2. Press and hold  to speed up the scrolling of the character being changed.



Personalizing Your Bravo 500 Pager

Press	To Display	Then Press
●	<i>POWER UP SCR</i>	▶ to display Power Up
● to set character	<i>A to 9</i>	▶ to go to next character
Repeat	Up to 20 characters	■ to save Power Up

Time and Date

Setting the Time

Your pager can be set to a 24-hour format when you buy it, or you can have your Service Center or service provider change it to a 24-hour format.

Press	To Display	Then Press
●	<i>SET TIME</i>	▶ to display the time
● to set the hour	<i>11 to 121</i>	▶ to go to next field
● to set minutes	<i>101 to 100</i>	▶ to go to next field
● for a.m. or p.m.	<i>A or P</i>	■ to save



Setting the Date

Press	To Display	Then Press
●	<i>SET DATE</i>	▶ to display the date
● to set month	<i>JAN to DEC</i>	▶ to go to next field
● to set day	<i>01 to 31</i>	▶ to go to next field
● to set year.	<i>01</i>	■ to save

Note: When you change the date, the day of the week is automatically updated.

Setting the Alarm

Press	To Display	Then Press
●	<i>SET ALARM</i>	▶ to display alarm status
●	<i>ALARM 1, 2, or 3</i>	▶ to select an alarm
● for alarm type	<i>OFF, DLY, SCH, or MHL</i>	▶ to select alarm type
● and ▶	alarm time [plus month/day if SCH]	▶ to advance to alarm prompt message
● to set character	<i>A to 9</i>	▶ to go to next character
Repeat	up to 20 characters	■ to save

Displaying Date or Day of the Week

Press	To Display	Then Press
▶ to switch between date & day of the week	JAN 0 1 12/0 1P or MON 12/0 1P	

Setting the Message Alert

Press	To Display	Then Press
●	SET ALERT	▶ to display alert type
●	VIBRATE, AUDIBLE, NO ALERT	▶ to select alert type
● if AUDIBLE	ALERT 1 to ALERT 12	▶ to select alert tone

Setting the Reminder Alert

Press	To Display	Then Press
●	SET REMINDER	▶ to activate
●	REM ON	▶ to display setting
●	0 1 to 60 (minutes)	■ to save



Setting the Message Alert



Messages

8

Messages

Your pager can store up to 20 personal messages and 5 maildrop messages.

Reading Messages

Press	To Display	Description
■	2 PAGES	Number of messages
■	123-4567	First Numerical message
■	CO 13-A	Number in brackets and address (usually A).
●	next message	

Locking/Unlocking Messages

You can lock up to ten messages to protect them.

Note: You cannot lock maildrop messages.

Press	To Display	Then Press
● with unlocked message displayed	LOCK	▶ to lock the message
● with locked message displayed	UNLOCK	▶ to unlock the message



Storing Individual Messages

Press	To Display	Then Press
●	SAVE DIR	▶ to display <i>1111</i> prompt
● to set character	A to Z	▶ to go to next character
■ to save name	1d MELODY	● to select music alert
		■ to save

Deleting Messages

Note: Messages must be unlocked before they can be deleted.

Deleting a Maildrop Message

Press	To Display	Then Press
● with maildrop message displayed	DELETE MAIL	▶ to delete maildrop message

Deleting an Individual Message

Press	To Display	Then Press
●	DELETE MSG	▶ to delete message



Deleting All Messages

Press	To Display	Then Press
● with Status screen displayed	DELETE ALL	▶ to delete all unlocked messages

Phone Book

You may store telephone numbers for up to 12 people and assign one of the 9 alert tones to each entry.

Adding Phone Numbers

Press	To Display	Then Press
●	TEL DIR	▶ to display phone book
●	Add DIR	▶ to display <i>1111</i> prompt
● and ▶	Full Name	■ to save & display TEL -
● and ▶	Phone Number	■ to save & display 1d MELODY
●	123456789	● to hear alert 1
Repeat	Desired alert	▶ to assign alert and exit

Modifying Phone Numbers

Press	To Display	Then Press
●	<i>TEL DIR</i>	▶ to display phone book
●	<i>MODIFY DIR</i>	▶ to display first entry
●	Desired phone book entry	▶ to edit
● and ▶	Correct Name	■ to save & display <i>TEL -</i>
● and ▶	Correct Phone Number	■ to save & display <i>1d MELODY</i>
▶	<i>123456789</i>	● to select music alert
▶		to save changes

Browsing Your Phone Book Entries

Press	To Display	Then Press
●	<i>TEL DIR</i>	▶ to display phone book
●	<i>BROWSE</i>	▶ to display first entry
●	Each phone book entry	▶ to view entry



Searching Your Phone Book Entries

Press	To Display	Then Press
●	<i>TEL DIR</i>	▶ to display phone book
●	<i>SEARCH</i>	▶ to activate search
● and ▶	First Few Characters	■ to jump to matching entry

Note: If there are no phone book entries that match the search characters, the message *NO SUCH NAME* is displayed.

QuickWords

QuickWords are short text messages that can be displayed when you are paged (see table below for code; asterisk plus number).

QuickWord Code	Message	QuickWord Code	Message
*0	RUNNING LATE	*5	CALL HOME
*1	ON MY WAY	*6	WHERE ARE U
*2	PICK ME UP	*7	MEET YOU AT
*3	I AM HOME	*8	I LOVE YOU
*4	COME HOME	*9	HAPPY B-DAY



Setting the Auto On/Off Times

You can set your pager to turn OFF at one time and come back ON at a later time.

Press	To Display	Then Press
●	<i>SET AUTO</i>	▶ to activate
●	<i>AUTO ON</i>	▶ to display OFF time
● and ▶	Auto Off time	▶ to go to Auto On
● and ▶	Auto On time	■ to save

Setting the Countdown Timer

Press	To Display	Then Press
●	<i>DOWN TIMER</i>	▶ to display choices
●	<i>ON</i>	▶ to select Timer ON
● and ▶	To set the time in hours, minutes, and seconds	■ to save

Note: To display the countdown timer instead of the Status screen, press and hold ■ for 2 seconds. Press ■ to return to the Status screen.