







TURNING PAGER ON

Open the flip lid and press any key to turn your pager on. The pager will display the Status screen.








TURNING PAGER OFF

- From the Main menu, press  or  to highlight Power Off and press 
- Highlight Yes and press 






READING MESSAGES

- To read a message, (while previewing) press  or  to highlight the desired message and press 
- Press  or  to scroll through the text of a message or press  to page down through the message








COMPOSING AND SENDING A MESSAGE

- From the Main menu, press  or  to highlight Write and press 
- After you finish composing the message, press  and select the Select Address icon
- Select the address to send to
- To send, return to the Write screen, by selecting "Done Selecting", highlight the Send icon (press  or , if needed) and press 








DELETING A MESSAGE

- From the Read menu, press  or  to highlight the inbox containing the message you want to delete and press 
- Select the message to delete and press  to open it and then press 







SETTING DATE AND TIME

- From the Main menu, press  or  to highlight Preferences and press 
- Select Setup and press 
- Press  to select Set Time & Date
- Press Nav buttons to move between fields and change the hour, minutes, and date by pressing 
- Press  to save and exit

SETTING THE ALARM

- From the Main menu, press  or  to highlight Set Alarm and press 
- Press  or  to change the “Mode”, “Snooze” and Alarm Tone, press  to set the time and date
- At any time, press  to save the changes and return to the Main menu

PRIVATE TIME

- From the Main menu, press  or  to highlight Preferences and press 
- Press  to highlight Private Time and press 
- Press Nav Buttons to activate Private Time and set the alert at End option. Press  to set the start and stop times.