









TURNING PAGER ON

- Open the flip and press any key to turn your pager on. The pager emits a 4-second power-up alert, and the Status screen displays.








TURNING PAGER OFF

- From the Main menu, press  or  to highlight *POWER OFF* and press .
- Highlight *YES* and press .




READING MESSAGES

- To read a message, (while previewing) press  or  to highlight the desired message and press .
- Press  or  to scroll through the text of a message or press  to page through the message.










COMPOSING AND SENDING A MESSAGE

- From the Send Message menu, press  or  to highlight *WRITE MESSAGE* and press .
- After you finish composing the message, press .
- To send, return to the Send Message menu, press  or  to highlight *SEND MESSAGE* and press .










DELETING A MESSAGE

- From the Main menu, press  or  to highlight the inbox containing the messages you want to delete and press .









SETTING THE DATE AND TIME

- From the Main menu, press  or  to highlight *PREFERENCES* and press .
- Press  to highlight *SET TIME & DATE* and press .
- Press  or  to change the hour, minutes, and date. Press  or  to move between fields.

SETTING THE ALARM

- From the Main menu, press  or  to highlight *PREFERENCES* and press .
- Press  or  to move between fields and  or  to increase or decrease the value in each field.
- At any time, press  to save the changes and return to the Preferences menu. Or press  to exit without saving your changes.

PRIVATE TIME

- From the Main menu, press  or  to highlight *PREFERENCES* and press .
- Press  or  to highlight *PRIVATE TIME* and press .
- Press  or  to activate Private Time mode.



Power on



MailBox



News/Info InBox



Send Message



Info-On-Demand



Address Book



Personal Folder/Move
message to folder



News/Info Folder



Preferences



Vital Signs



Power Off



Message has been read



Message reply



Reply in progress



Delete Message/Inbox



Successful Reply/Send



Unsuccessful Reply/Send



Message contains custom
reply choices



InBox



InBox - messages read



News/Info InBox



InBox alert selected



Out of Range



Low Battery



Audible Alert/Alarm





 









 
 



 

Vibrate Alert/Quiet Mode



Private Time



Signature

	MailBox Alert, News/Info Alert		Message Memory
	Alarm/Set Alarm		About Screen
	Set Time & Date		Back/Escape
	Alert Volume/Key Click, Reminder Alert		Yes/On
	Transmitter Off		No/Off
+	Next/higher value		News AutoPreview
-	Preceding/lower value		Set InBox History
	Previous item		Next Message
	Next item		CAPS (not locked)
	Move InBox Up		CAPS Lock on
	Move InBox Down		Alt (not locked)
	Battery Gauge		Alt Lock On

Note:

A flashing icon denotes unread messages or a function in process.