

### TURNING PAGER ON AND OFF

You can turn OFF your e80 by selecting the POWER OFF icon in the Main Menu.

Turn the device back ON by pressing **ALT**, and then **SPACE**.

The Main Menu icons will appear in the LCD display when it is on again.

Note: Two additional methods of turning off the device are:

- Pressing **ALT**, then **SPACE**.
- Pressing *Power Off* in the Main Menu popup options menu

### SETTING TIME AND DATE

1. Go to PREFERENCES → *Date and Time*. The Date and Time submenu is displayed.
2. Use the joystick to move from one field to another, and press the joystick to change options in each selectable field.
3. Set *Time Format* to “24hr” or “12hr”.
4. Set the current *Time*.  
HH (00-23 for 24-hour format, or 01-12 for 12hr format)  
MM (set automatically by system if *Network Sync* is set to Yes)  
AM/PM (only if 12hr format is selected)
5. Set the current *Date*:  
MMM (“Jan”, “Feb”, “Mar”, etc.)  
DD (01-31)  
YY (00-99)

6. If *Network Sync* is set to Yes, then the device will automatically set the minutes of the Time.
7. Press **ESC** to exit from *Date and Time*. Your changes are automatically saved.

## MAIN MENU OPTIONS

 
To change your alert sound:

Press **MENU** and select:

- *Silence Alerts* to turn off your alert sound (note: alarm alerts are not affected)
- *Vibrate Alerts* to change your alert sound to vibrate (note: alarm alerts are not affected)

Return to your default alert setting by selecting *Alerts On* (note: alarm alerts are not affected)

To turn off message transmission:

Press **MENU** and select *Transmitter Off*. You can receive messages, but will not be able to send messages until you turn message transmission on again. The icon  will display on the Main Menu screen when the transmitter is off. Your device will not transmit when the transmitter is off!

Turn message transmission back on by selecting *Transmitter On*.

To lock your keyboard:

Press **MENU** and select *Keyboard Lock*. Alternately, you may lock the keyboard from the Main Menu by pressing **ALT** then L.

Unlock the keyboard by pressing **ALT** then L.

## SENDING AND COMPOSING MESSAGES

You can compose and send messages to wireless and email addresses.

To start, select *Send a Message* in the Main Menu.

The send a message screen is displayed. Move the cursor (push the joystick ↓ ) to the MSG field and type your message.

Select **INBOX** in the Main Menu. A listing is displayed of all messages in your Inbox, organized from the newest (at the top) to the oldest.

Scroll through the Inbox menu of received messages to the desired message.

Press the joystick to open the message for viewing.

Press **ESC** to return to the Inbox when finished reading the message.

## DELETING MESSAGES

Scroll to the message you want to delete.

Press **MENU** to open the Inbox Options popups menu and select one of:

*Delete* to delete a single, selected message; alternatively, you may press **ALT DEL**.

*Delete All Msgs* to delete all messages in your Inbox.

*Delete Read Msgs* to delete all messages that are marked as Read. Messages marked as "Unread" will not be deleted.

If you have set the Confirm Delete option (PREFERENCES → *Options* → *Confirm Delete*) to "Yes", then you will be asked to confirm or cancel the deletion.

## SETTING A MESSAGE TIMESTAMP

You can also have your e80 timestamp messages.

Go to PREFERENCE → *Message Timestamp*

Set *Timestamp* to "Yes" (ON)

Set *Time Format* to 12hr or 24hr

Set *Date Format* to one of:

“Full” (Feb 28, 2006),

“dd/mm/yyyy” or

“mm/dd/yyyy”

Press **ESC** to save and exit from Timestamp.setting private time

Private Time allows you to turn off the Inbox and News Message Alerts for a specified period of time every day (for example, when you are asleep at night). To configure Private Time:

Go to PREFERENCES → *Private Time*.

Set *Private Time* to “Yes” to turn on Private Time.

Enter the *Start Time* by clicking in each field until the desired number or option appears:

If Date and Time *Time Format* is set to 12hr format, set the hour (01-12), minute (00-59), and AM or PM. If Date and Time *Time Format* is set to 24hr format, set the hour (00-23) and the minute (00-59).

Enter the *End Time* by clicking in each field until the desired number or option appears:

If Date and Time *Time Format* is set to 12hr format, set the hour (01-12), minute (00-59), and AM or PM. If Date and Time *Time Format* is set to 24hr format, set the hour (00-23) and the minute (00-59).

Set *Alert at End* to “Yes” (default) or “No.” When set to Yes, an alert sounds at the end of Private Time if new messages are in the Inbox.

Press **ESC** to save and exit from Private Time. Private Time is now turned on and will go into effect for the selected time period (from Start Time to End Time.)